

**zebra and peaking controls are also accessed through the VF menu

Monitor settings can be accessed through the **Video** menu.

To access control of external monitor settings go to
Menu > Video Menu > SDI1/SDI2/HDMI output on/off.

*It is here you can also select monitor LUTS and whether you want to superimpose menus and status or send a clean signal on the SDI and HDMI output

RED

The following tools are built in to RED cameras and can be overlaid on the viewfinder:
false color (exposure and video) zebra and peaking

To set peaking/zebra/exposure/video false color go to **Menu > Overlays> Tools >**

Alternately, to quickly toggle video false color on/off simply press the “2” button on the side of the viewfinder.